




NDI CORE

NDI CORE Deployment & Activation Guide

Please go to our NDI CORE website:


<https://www.kiloview.com/en/ndi/ndi-core/>

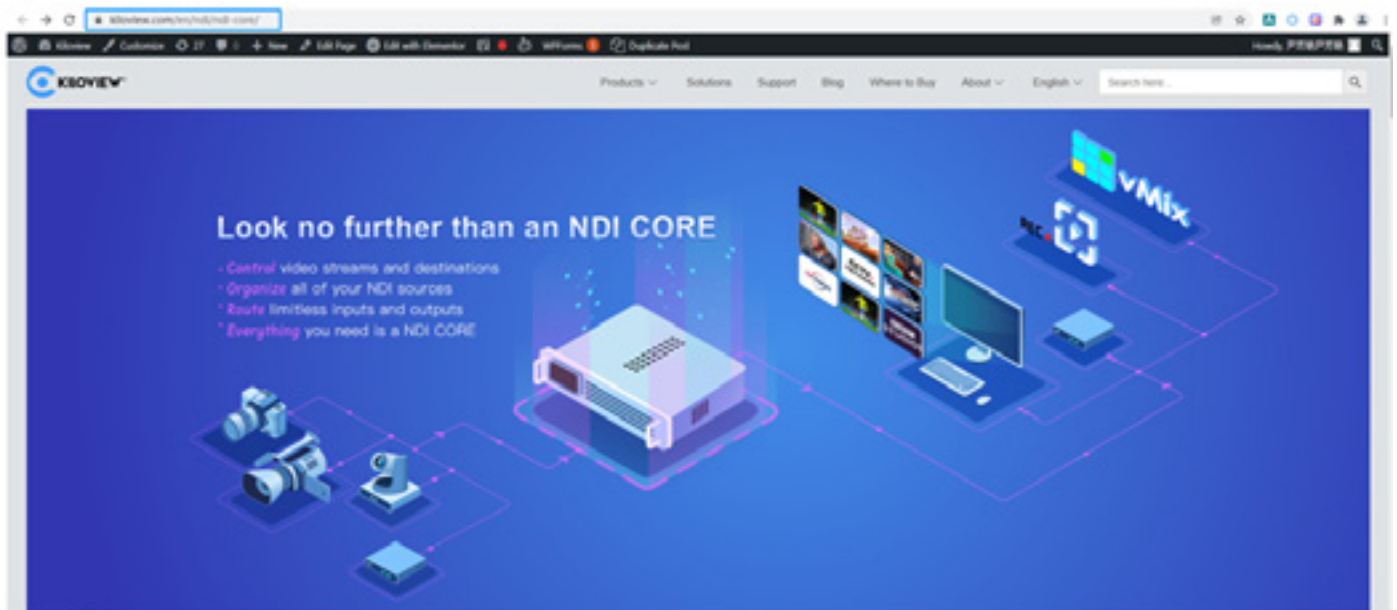

Let's begin.


Step 1:

Click **“Install Basic/Pro package”** to download NDI CORE deployment file.

NDI CORE Basic	NDI CORE Pro
 <p>UNLIMITED KILOVIEW® / NewTeK® NDI inputs. Other NDI inputs: 16</p> <p>KILOVIEW® NewTeK® NDI x16</p>	 <p>UNLIMITED NDI inputs from any NDI sources. UNLIMITED NDI outputs to UNLIMITED destinations.</p>
<p>Maximum outputs: 16 NDI signals NDI outgosting destinations: UNLIMITED KILOVIEW service: Via email / message only.</p> <p>Install Basic Package (15 days free trial)</p>	<p>Loop Playlist: Supported Two types of switch panels of your choice. KILOVIEW service: Remote online guidance.</p> <p>Install Pro Package (15 days free trial)</p>

Step 2:


Click the **“Deployment Guide”** button to download the deployment guide.
Follow the instruction and deploy your NDI CORE set up

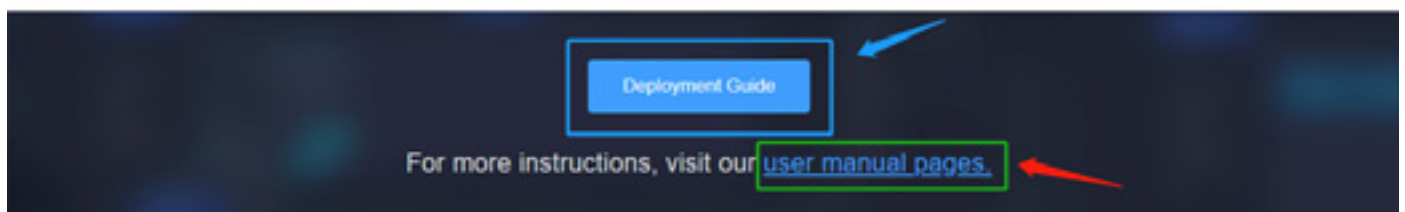

Deployment Guide

For more instructions, visit our [user manual pages.](#)


For more instructions, click the **“user manual pages”** to visit the following page:

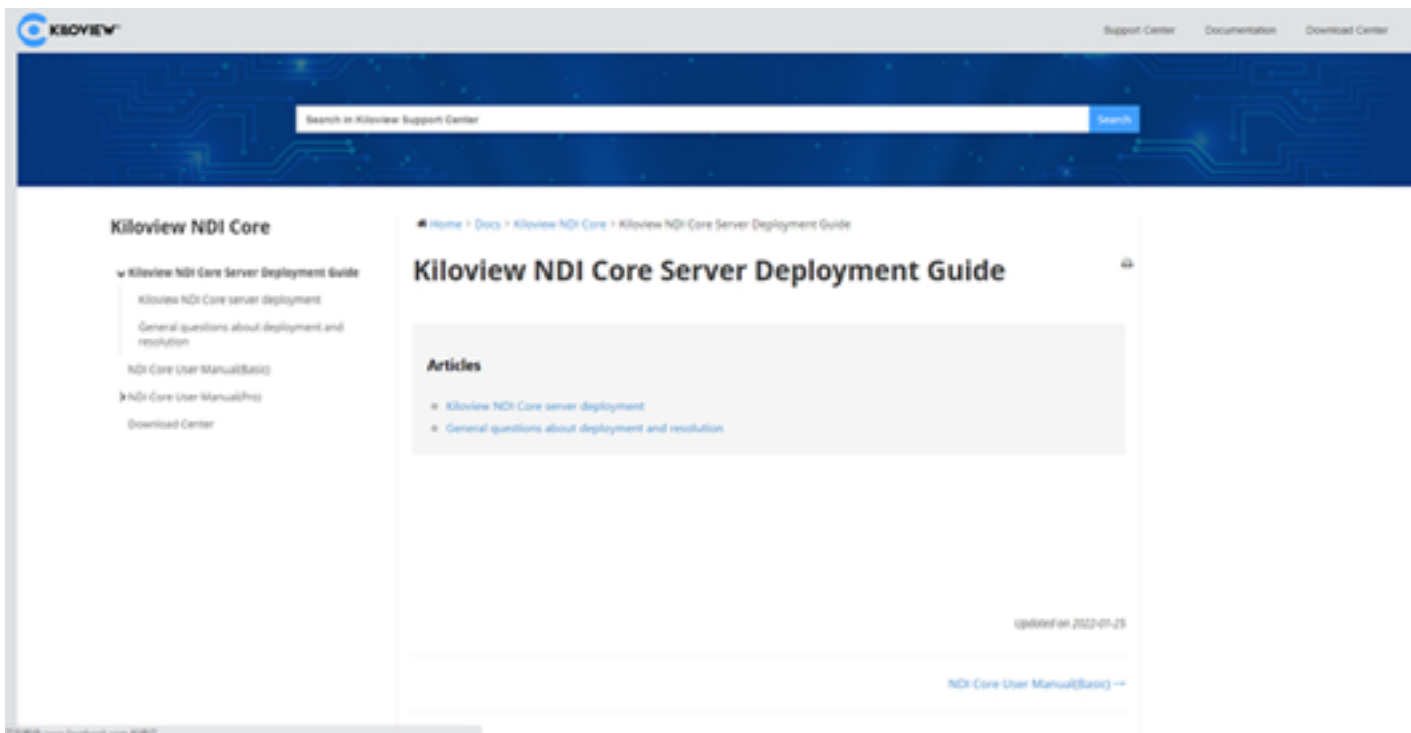

Step 3:

After set up, go to `http://server IP:81/`

Login into NDI Core, the default user name and password are the same: **admin**

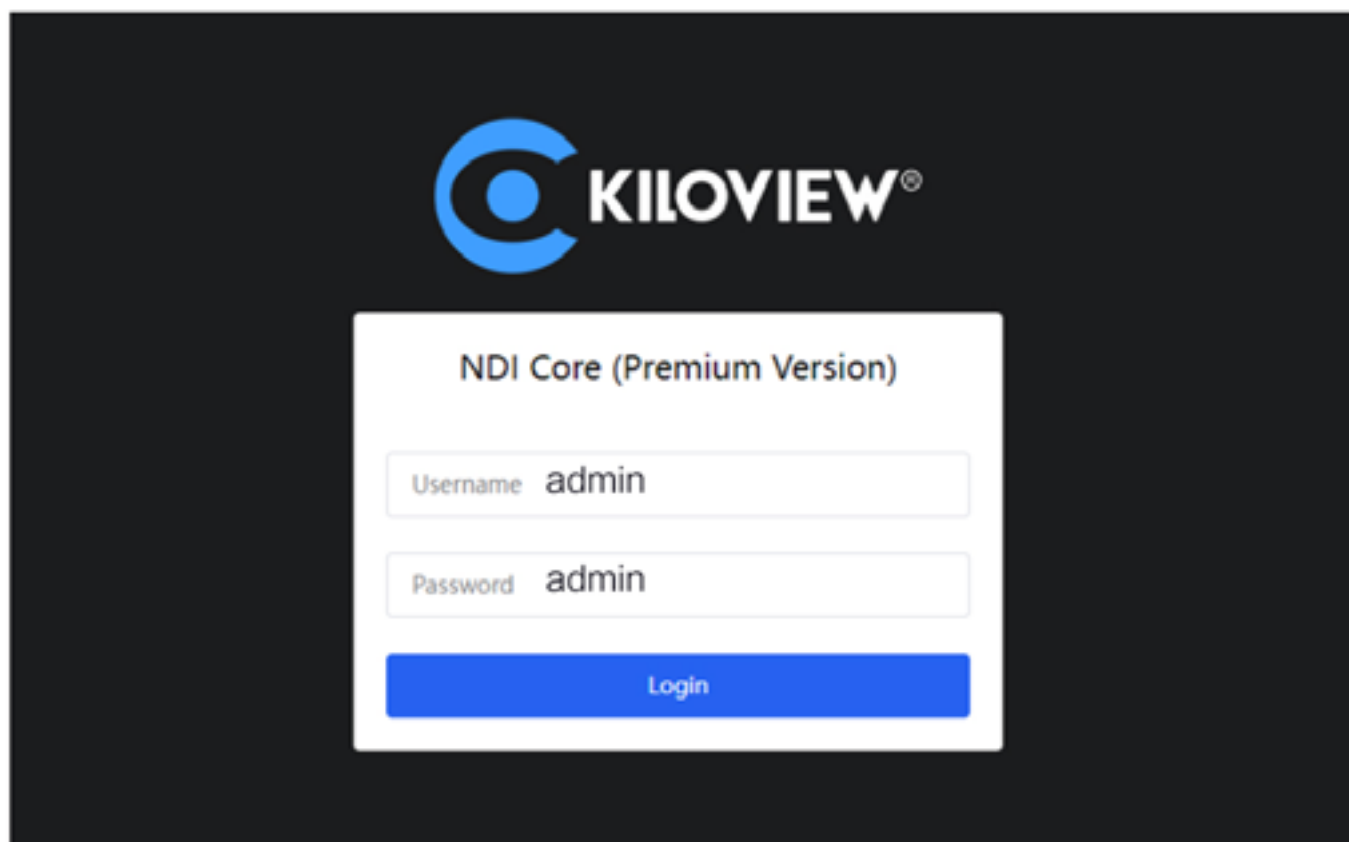

To activate your NDI CORE


1. After your 15-days free trial, go to the top right of the NDI CORE page, click **“Trial Period 15 Days”** to authorize service.



2. Copy your **“Device Code”** and send it to your sales counselor, or go to our distributors for license.

3. Sales counselor will send you the authorization code for NDI CORE.

4. Fill in the authorization code. Once confirmed, your NDI Core will unlock the full version.

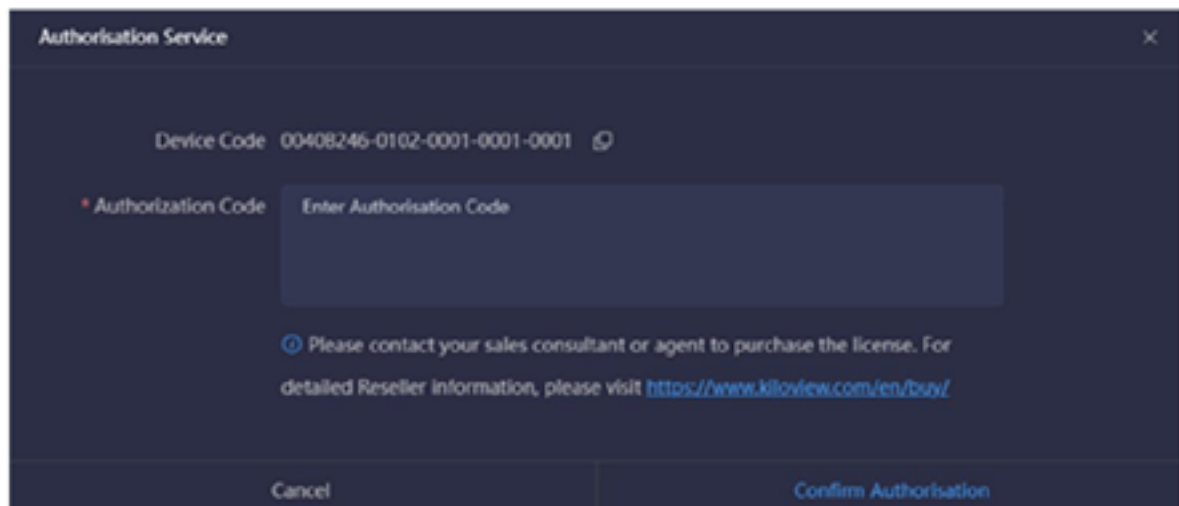

Note:

1. Your device code will be different based on your Basic/Pro version. Please inform your sales counselor before purchasing licenses.

2. Your “Authorization code” is a unique match to your “Device Code” . If you change your server CPU or installing another NDI CORE, you will need a new “Device Code” and purchase a new License for authorization.